


OCTO KIT - IR Repeater system

Thank you for purchasing Artcooustic Octo IR repeater kit which is ideal for controlling up to 8 units of A/V devices behind the closed Artcooustic Linax Duo door.

The Artcooustic Octo IR repeater kit is compatible with all standard IR remote control handsets

EACH OCTO KIT CONTENTS:

- (1) RPT-104-1
IR CONNECTING BOX.....IPC
 - (2) IRT-3800
PANEL-MOUNT IR RECIEVER,PLASMA FRIENDLY IPC
 - (3) IRC-3800A
IR RECEIVER, PLASMA FRIENDLY..... IPC
 - (4) IEC-3502
DUAL EMITTER..... 4PCS
 - (5) PW-1205
12V/500mA DC ADAPTOR IPC
- (1) RPT-104-1 (2)IRT-3800 (3)IRC-3800A (4) IEC-3502 (5) PWS-1205

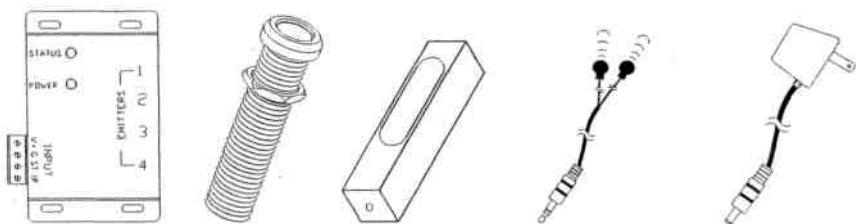

MOUNTING INSTRUCTION & INSTALLATION DIAGRAM:

MOUNTING INSTRUCTION

(according to the above installation diagram):

- Mount the RPT-104-1IR connecting box on the back of the Linax Duo cabinet and near an AC outlet in accordance with the requirement of the input voltage for the PW-1205 power supply.
- Choose & connect your desirable IR receiver from the options of IRT-3800 & IRC-3800A to the RPT-104-1 connecting box (both receivers can also be parallel connected depending on your needs) Next mount the IR receiver eyes in a desired location, depending on the specific installation and set-up

- Plug your necessary amount of IEC-3502 dual emitter into the RPT-104-1 connecting box and adhere the emitter directly onto top of the component's IR sensors.
- The PW-1205 power DC adaptor plugs into a voltage compliant AC outlet and connects to the "POWER" receptacle of the RPT-104-1 connecting box. Make sure the POWER LED indicator is on green light for further operation while the RPT-104-1 is plugged into the PW-1205.

INSTALLATION DIAGRAM

